



Axon Body 3 Function Guide


IMPORTANT: Before using an Axon Body 3 camera, ensure it is registered to your agency, assigned, and fully charged. Refer to the Axon Body 3 Registration Guide or [online instructions](#) for more information.

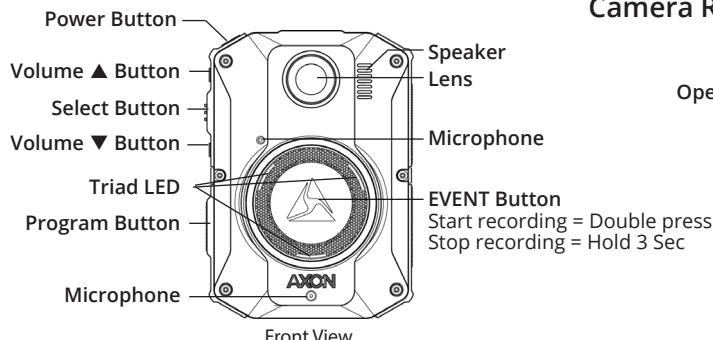

Camera Reference

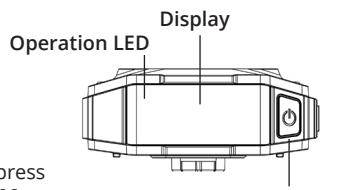

Top View

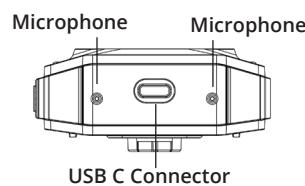

Bottom View

Read, understand, and follow all current instructions, warnings, and relevant Axon training materials before using any Axon system. The most up-to-date warnings and instructions are available at www.axon.com. See the Axon Body 3 Product Guide page (www.my.axon.com/axon-body-3) for registration information, operating instruction, training videos, and manuals.

Operating Button Actions


The Axon Body 3 camera button actions associated with each user action are described below.

Action	Button Actions
Power On	Press Power button until short vibration. Camera starts and enters Ready (Buffering) mode.
Power Off	Press and hold Power button for 3 seconds.
Start recording	Double-press Event button.
End recording	Press and hold Event button for 3 seconds.
Add marker to recording	While recording, press Select button.
Increase speaker volume	Press Volume ▲ button.
Decrease speaker volume	Press Volume ▼ button.
Turn lights on or off	Press and hold Volume ▲ button for 3 seconds.
Enter Stealth mode	Press and hold Volume ▼ button for 3 seconds.
Exit Stealth mode	Press and hold Volume ▲ or Volume ▼ button for 3 seconds*.
Enter or exit Mute mode	While recording, press and hold Select button for 3 seconds.
Enter Sleep mode	Press Power button and then press Select button
Exit Sleep mode	Press Power button or double-press Event button
Activate display backlight	Double-press Select button. Display backlight turns on for 5 seconds.
Pairing	Simultaneously press Event and Program buttons, then release.

* - The camera remembers volume and light settings when exiting Stealth mode.

Camera Display

The Axon Body 3 camera display, on top of the camera, shows camera status and activity information. The display is divided into a Status Bar and Activity Area. Different information is shown in the field and dock. See the other side of this guide for additional camera display information.

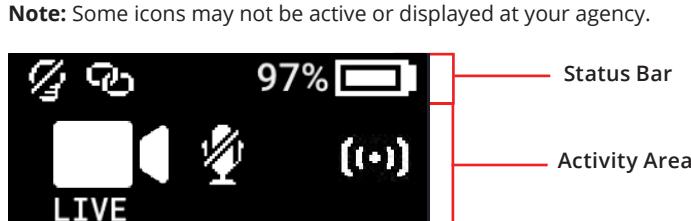


Uploading Videos and Charging Axon Body 3 Cameras

IMPORTANT: Ensure the camera **USB port** is dry and free of dirt or debris before placing the camera in a **Dock** or connecting a **USB-C cable**.

Insert the Axon Body 3 camera into an Axon Body 3 Dock bay to upload videos and charge the camera's battery.

DO NOT unplug the Axon Dock power supply while Axon devices are inserted in the bays.

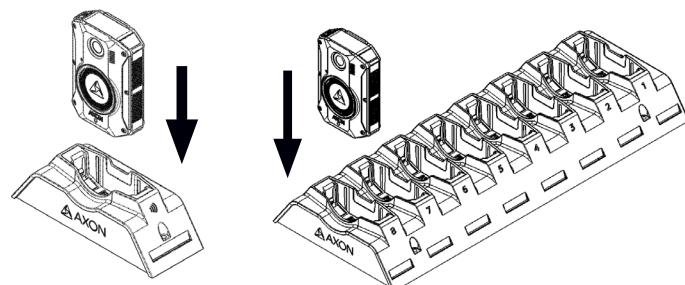

Examples: Axon Body 3 camera inserted into a 1-Bay dock (left) and an 8-Bay dock (right)

Using Axon View

The Axon View application enables you to replay video and add metadata (GPS, title, case ID, and category) to your videos using a smart phone or other smart device. **Note:** Videos are not stored on your smart device

1. Using your smart device, search for, download, and install the Axon View application from the Play Store or the App Store.
2. Open Axon View, select a Axon Body 3 camera and tap **Initiate Pairing**. You may need to sign in to your Axon Evidence.com account.
3. Turn on your Axon Body 3 camera. On the Axon Body 3 camera, press the **Program** and **Event** buttons at the same time.

You will hear three short rising-pitch tones, the Operation LED will blink blue, and PAIRING is shown on the display.

4. Follow the Axon View on-screen instructions.

Status Bar Icons	Description
58%	Battery capacity
	Camera paired
	Lights off
	Stealth mode on
!	Battery low warning (right of battery capacity)

Axon Body 3 Camera Display and Notifications in the Field

The Axon Body 3 camera display, on top of the camera, shows information on camera status and activity. The camera also emits sounds called audio prompts to notify you of the device status or when you take an action. The audio prompts can be accompanied by a haptic notification (vibration) that matches the audio.

Operating Mode or Action	Camera Display (Activity Area)	Operation LED	Audio Notification	Haptic Notification (Vibration)
Power on		Solid red	Two short rising-pitch tones	One - long duration
Power off		Solid red	Three short lowering-pitch tones	One - long duration
Recording started by Event button double-press		Blinking red	Two short tones	Two - short duration
Recording started by Axon Signal		Blinking red	Two short tones	Two - short duration
Recording started by gunshot detection		Blinking red	Two short tones	Two - short duration
Recording reminder		Blinking red	Two short tones every 2 minutes	Two - short duration every 2 minutes
Stop recording, return to Ready		Blinking green	One long tone	One - long duration
Volume up or down		Blinking green or red	One short tone at new volume level	One - short duration
Axon Respond Livestreaming		Blinking purple	Three short rising-pitch tones	One - long duration
Enter or Exit Mute mode (microphone off)		Blinking blue in Mute mode	One short tone	Two - long duration
Enter Stealth mode		Off	None	None
Exit Stealth mode		Blinking green or red	None	Two - short duration
Event marker captured		Blinking red	None	One - short duration
Sleep mode		Enter = off, Exit = blinking	One short tone	One - long duration
Low battery notifications: At 10% and 5% battery capacity.		Blinking yellow	Four quick high-pitch tones	Four - short duration
Camera enters Pairing mode		Blinking blue	Three short rising-pitch tones	None

Axon Body 3 Camera Display and Triad LED Status Information in the Dock

When you plug an Axon Body 3 camera into an Axon Body 3 Dock, the Triad LED on the front of the camera shows the device status and battery capacity. The Axon Body 3 camera display, on top of the camera, shows information on camera status and activity.

Device Status	Camera Display		Triad LED
	Activity Area	Status Bar	
Uploading data	UPLOADING 1/10		Spinning yellow (cycling on each Triad LED)
Downloading data or applying device settings	UPDATING		Spinning yellow (cycling on each Triad LED)
Applying firmware update	UPDATING		Spinning white (cycling on each Triad LED)
Possible network error. Check network connection and refer to Troubleshooting section of the Axon Body 3 User Manual or go to help.axon.com .	NETWORK ERROR		Blinking red and green
Device error. Refer to device page in Axon Evidence.	DEVICE ERROR		Blinking red
Assigned user ID - shown when no other activity, other than charging, and for 10 seconds after removing from dock	USERID123		Battery capacity
Battery capacity. The charge indicator (■) is shown to the right of battery capacity during charge	Any of the above		Solid green (fully charged, 90% or more) Solid yellow (mid-range, 11% to 89%) Solid red (low-range, 10% or less)

Play Store is a trademark of Google, Inc.; App Store is a trademark of Apple, Inc.

▲ AXON, Axon, Axon Body 3, Axon Dock, Axon View, and Axon Evidence are trademarks of Axon Enterprise, Inc., some of which are registered in the US and other countries. For more information, visit www.axon.com/legal. All rights reserved. © 2021 Axon Enterprise, Inc. MPC0288 Rev: D