



# AXON BODY 3


OAKLANDPDCA.EVIDENCE.COM

---

TRAINING



# WELCOME

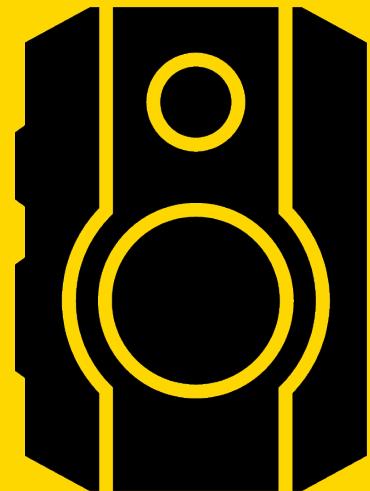

## AXON BODY 3



# AGENDA

AXON BODY 3 (AB3) OVERVIEW

OPERATING FUNCTIONS

MOUNTS

AXON VIEW & PAIRING

AXON VIEW XL

AXON DOCK


AXON CAPTURE AND CITIZEN

EVIDENCE.COM





# AB3 OVERVIEW

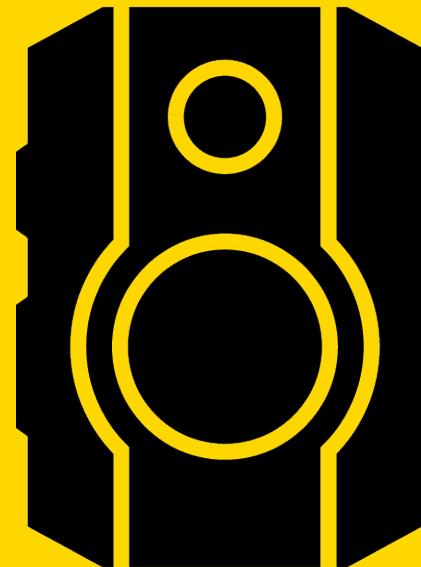



# AB3 OVERVIEW

- **12+ hour battery life under normal use**
- **30 frames per second**
- **146° diagonal field of view camera lens**
- **NO night vision**
- **IP67 rating (don't submerge)**
- **720H HD, Embedded GPS**
- **LTE Connectivity**
- **LCD Display**
- **OPD: 30 second buffer**





## Exercise: Turn the camera on/off



## AB3 | POWER BUTTON





AB3 | EVENT BUTTON

  
AXON



AB3 | TRIAD LED

AXON



AB3 | LENS

 AXON



AB3 | SPEAKER


  
AXON



AB3 | MICROPHONES



AB3 | MICROPHONES

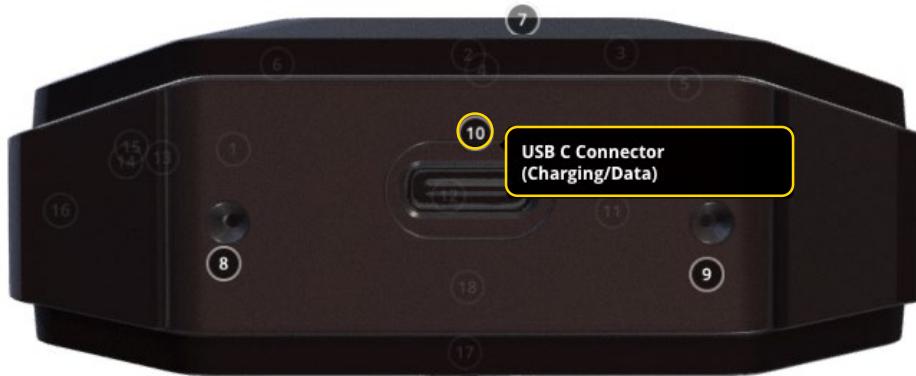

AB3 | USB C CONNECTOR



AB3 | OPERATION LED

  
AXON



ON AIR



AB3 | LCD DISPLAY

AXON



## AB3 | VOLUME BUTTONS





AB3 | SELECT + PROGRAM BUTTONS



AXON



**MOUNT**

Axon offers a variety of  
mounting options.

AB3 | MOUNT


  
AXON



AB3 | HEAT SINK

  
AXON

# OPERATING FUNCTIONS

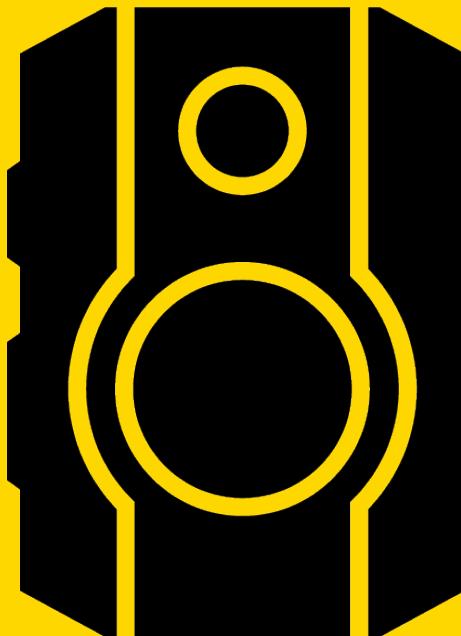

# BUFFERING MODE



The Buffering Mode is 30 seconds,  
no audio



# RECORDING VIDEO



To start a recording, double  
press the Event Button



\*While recording, the AB3 will beep and vibrate  
every two minutes to remind user it is recording.

# RECORDING VIDEO



**EXERCISE:**  
Start/Stop at least 3  
Videos

To end a recording, hold the Event  
Button for approximately 3 seconds



# ■ ADDING MARKERS

Select  
Button



**To add a marker:** Press and release the Select Button. The AB3 will vibrate to confirm a Marker was added

# SPEAKER VOLUME

Volume  
Up



Volume  
Down

**Increase Speaker Volume:**  
Press Volume Up Button

**Decrease Speaker Volume:**  
Press Volume Down Button

# ■ STEALTH MODE



BE CAREFUL: You could easily forget the camera is recording in stealth mode!

\*Turns off the Operation LED, audio prompts, and haptic feedback

**Enter Stealth Mode:** Press and hold Volume Down button for 3 seconds

**Exit Stealth Mode:** Press and hold Volume Up or Down button for 3 seconds

# ■ OTHER OPERATING MODES

Volume Up

Select Button



**Activate Lights On or Off:** Press and hold Volume Up button for 3 seconds


**Activate Display Backlight:** Double Press Select Button (Backlight activates for 5 seconds)

# SLEEP MODE



To enter Sleep Mode, press the **Power button**, **Press Select to Enter Sleep** is displayed

# SLEEP MODE

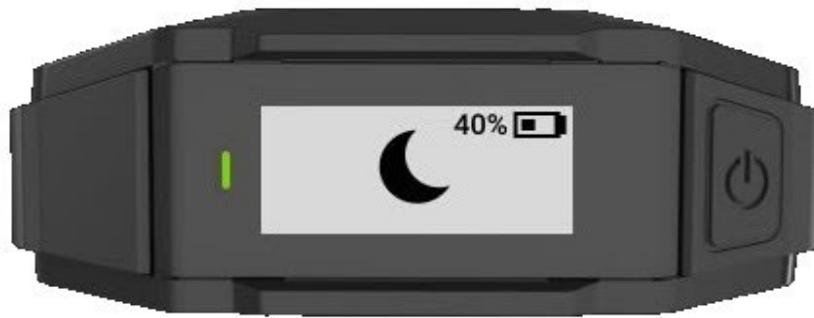

Within 3 seconds, press the Select button to confirm, a **Crescent Moon** icon will be displayed

**Exercise:** When might we use sleep mode???

\* To exit Sleep Mode:

- Press the Power button to return the camera to a buffering state
- Double-press the Event button to begin recording

# WHAT'S THE DIFFERENCE BETWEEN BUFFERING AND SLEEP?



- Buffering: Camera ready to record, 30 second pre-record on, will respond to signals (holster, Taser, car [all coming soon])

- Sleep: Camera ready to record, NO 30 second pre-record, WILL NOT respond to signals

- **What mode should we be in when in the field??**

# PAIRING MODE



**Enter Pairing Mode:** Press the Program AND Event Button at the same time






# BUTTON ACTION RECAP

Action	Button Actions
Power On	Press Power button until short vibration. Camera starts and enters Ready (Buffering) mode.
Power Off	Press and hold Power button for 3 seconds.
Start recording	Double-press Event button.
End recording	Press and hold Event button for 3 seconds.
Add marker to recording	While recording, press Select button.
Increase speaker volume	Press Volume ▲ button.
Decrease speaker volume	Press Volume ▼ button.
Turn lights on or off	Press and hold Volume ▲ button for 3 seconds.
Enter Stealth mode	Press and hold Volume ▼ button for 3 seconds.
Exit Stealth mode	Press and hold Volume ▲ or Volume ▼ button for 3 seconds*.
Enter or exit Mute mode	While recording, press and hold Select button for 3 seconds.
Enter Sleep mode	Press Power button and then press Select button
Exit Sleep mode	Press Power button or double-press Event Button
Activate display backlight	Double-press Select button. Display backlight turns on for 5 seconds.
Pairing	Simultaneously press Event and Program buttons, then release.

\* - The camera remembers volume and light settings when exiting Stealth mode.

# AB3 DISPLAY

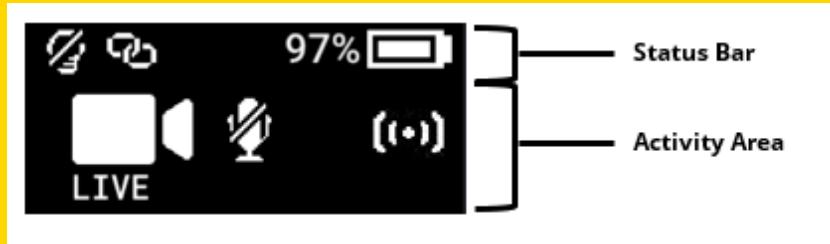

Status Bar Icon	Description
58%	Battery capacity
	Camera paired
	Lights off
	Stealth mode on
	Battery low warning (to the right of the battery capacity icon)

Activity Area Icon	Description
	Ready (Buffering) mode
	Recording
	Recording started by Axon Signal broadcast*
	Axon Respond Livestreaming*
	Recording started by gunshot detection*
	Microphone off (mute mode)
	Sleep Mode*

# AB3 DISPLAY & NOTIFICATIONS

Operating Mode or Action	Camera Display (Activity Area)	Operation LED	Audio Notification	Haptic Notification (Vibration)
Power on		Solid red	Two short rising-pitch tones	One - long duration
Power off		Solid red	Three short lowering-pitch tones	One - long duration
Recording started by Event button double-press	<b>STARTING</b> then 	Blinking red	Two short tones	Two - short duration
Recording started by Axon Signal		Blinking red	Two short tones	Two - short duration
Recording started by gunshot detection		Blinking red	Two short tones	Two - short duration
Recording reminder		Blinking red	Two short tones every 2 minutes	Two - short duration every 2 minutes
Stop recording, return to Ready	<b>SAVING</b> then <b>READY</b>	Blinking green	One long tone	One - long duration
Volume up or down		Blinking green or red	One short tone at new volume level	One - short duration
Axon Respond Livestreaming		Blinking purple	Three short rising-pitch tones	One - long duration
Enter or Exit Mute mode (microphone off)		Blinking blue in Mute mode	One short tone	Two - long duration
Enter Stealth mode	<b>STEALTH</b>	Off	None	None
Exit Stealth mode	No change	Blinking green or red	None	Two - short duration
Event marker captured		Blinking red	None	One - short duration
Sleep mode		Enter = off, Exit = blinking	One short tone	One - long duration
Low battery notifications: 20% battery capacity and every 5% decrease OR any error	<b>BATTERY LOW</b>	Blinking yellow	Four quick high-pitch tones	Four - short duration
Camera enters Pairing mode	<b>PAIRING</b>	Blinking blue	Three short rising-pitch tones	None

# AXON APP DEFINITIONS



**View**  
(Mobile App)

**Video playback, live streaming at 30 fps, metadata entry, and AB3 settings**



**View XL**  
(Standalone Software)

**Video playback, metadata entry, evidence upload, and AB3 settings**



**Axon Evidence**

**Cloud based Digital Evidence Management System (DEMS)**



**Device Manager**  
(Mobile App)


**Assign, reassign, and unassign AB3 to users, and register AB3 to agency**



**Capture**  
(Mobile App)

**Video, audio, and image capture from mobile device and upload directly to Axon Evidence**

# MOUNTS

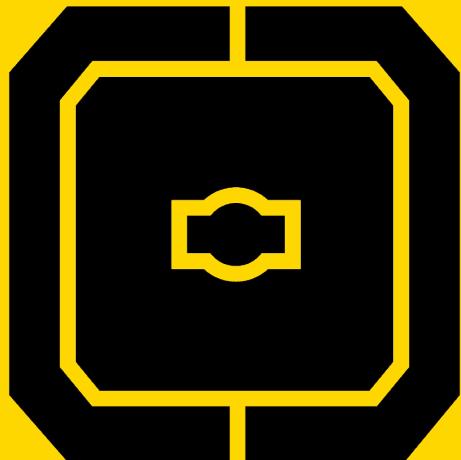

# MOUNTS



**Magnet**




**Mini MOLLE (for  
ergo vests)**

# WHAT'S OUR POLICY ON MOUNTING?


---

- I – 15: “Members shall position and securely attach the BWC to the front of their uniform or uniform equipment, as the primary recording location, to facilitate recording.”
- Can I move it somewhere else temporarily? **YES!** “The BWC may be temporarily moved from the primary location to facilitate recording in furtherance of a police objective. Upon completion of the objective, the BWC shall be returned to the primary recording location as soon as practical.”
- This means...fixed posts, back of patrol cars, etc.

# AXON VIEW

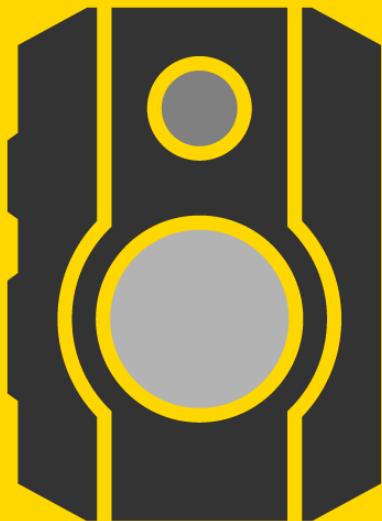

# PROVIDES THE FOLLOWING CAPABILITIES

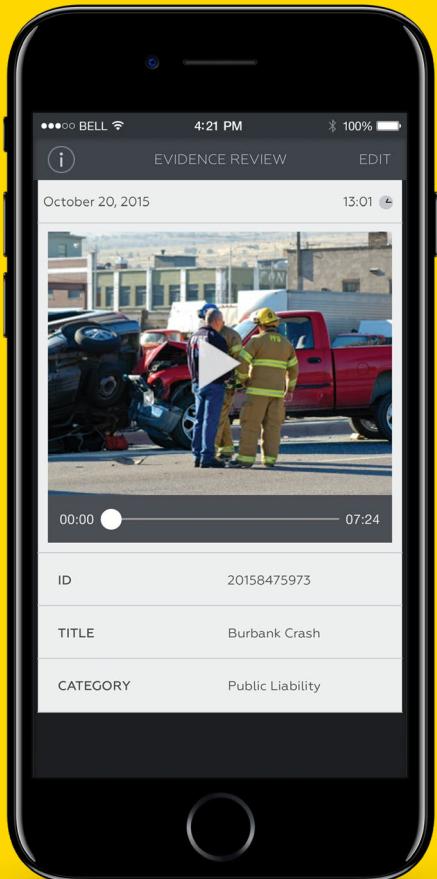


- Pairs AB3 with Android or iOS devices
- Instant replay
- Live video streaming assists with optimal camera placement
- Real-time metadata input enables accurate retention
- Adjust AB3 settings


# PAIRING YOUR AB3




## Step 1

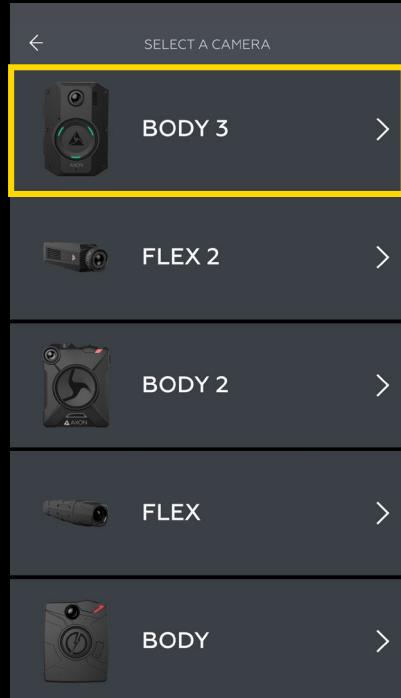


## Step 2

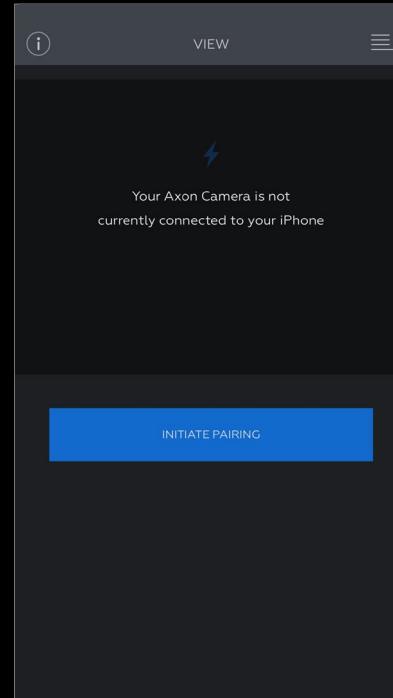

## Step 3

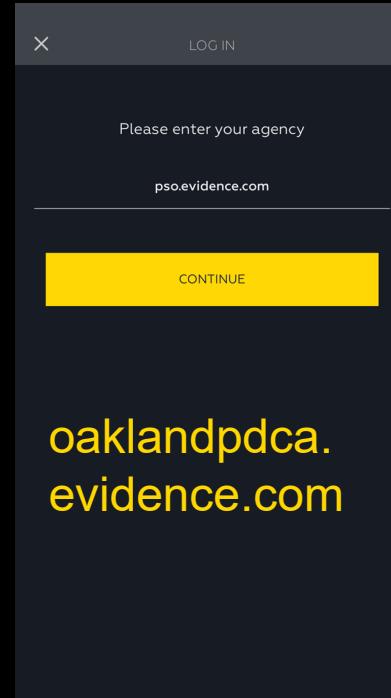

## Step 4

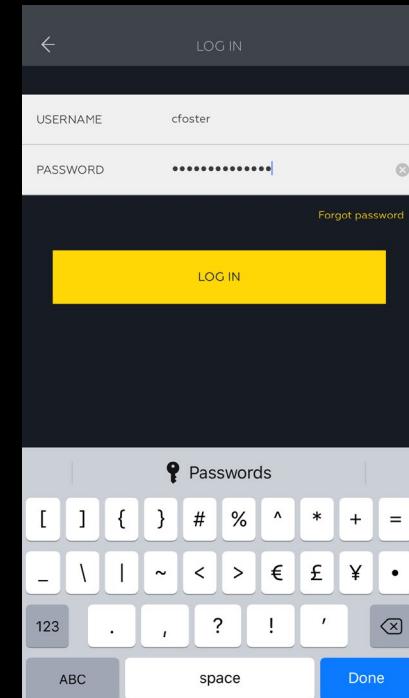

SELECT BODY 3

→ TAP INITIATE PAIRING

→ ENTER AGENCY

→ ENTER PERSONAL ID



# PAIRING YOUR AB3

Step 5




1. Power on the AB3
2. Press the Program AND Event button at the same time to place the AB3 into Pairing mode
3. The Operation and Triad LED, if enabled, will blink blue and the LCD Display will display "PAIRING"

# PAIRING YOUR AB3



## Step 6

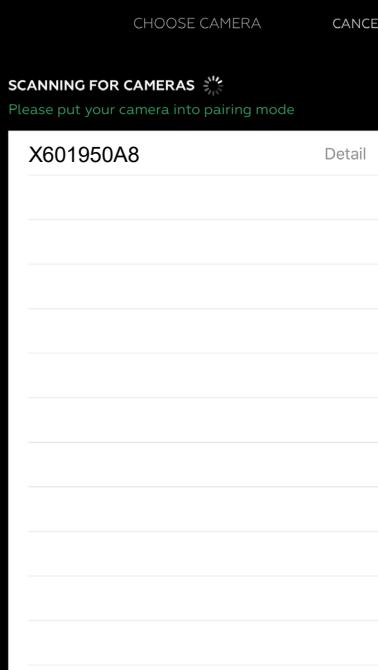

## Step 7



**MATCH AB3 SERIAL #  
TO AXON VIEW**

## Step 8


# SCAN FOR CAMERAS

## CONNECT

# USING AXON VIEW - ANNOTATING




## Step 1

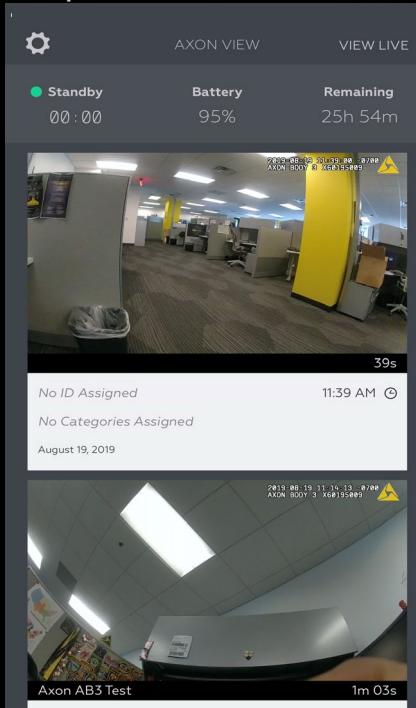


ENTER EVIDENCE LIST

## Step 2

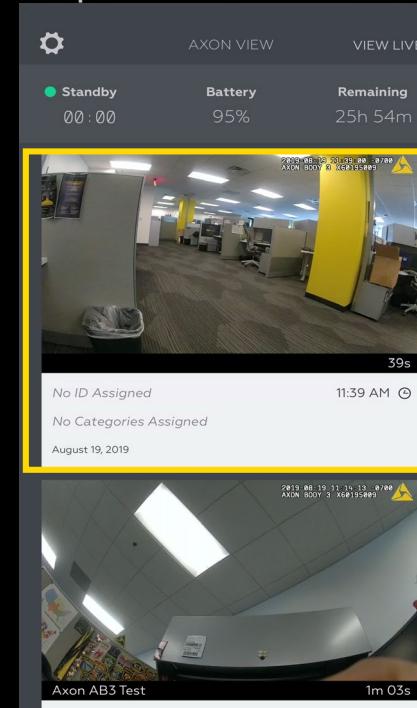

TAP ON THUMBNAIL

## Step 3

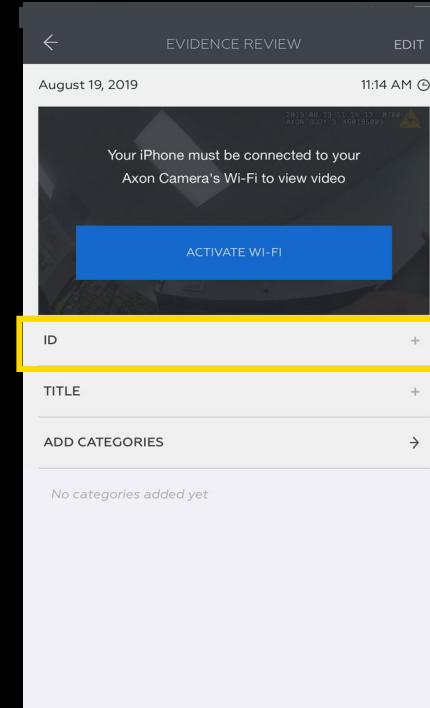

ADD ID

# ID NUMBER ENTRIES

RD#: YY-XXXXXX

Incident #:  
LOPYYMMDDXXXXXX


IA Case #: YY-XXXX

Doesn't fit any of these three:  
NA

# USING AXON VIEW - ANNOTATING




Step 4

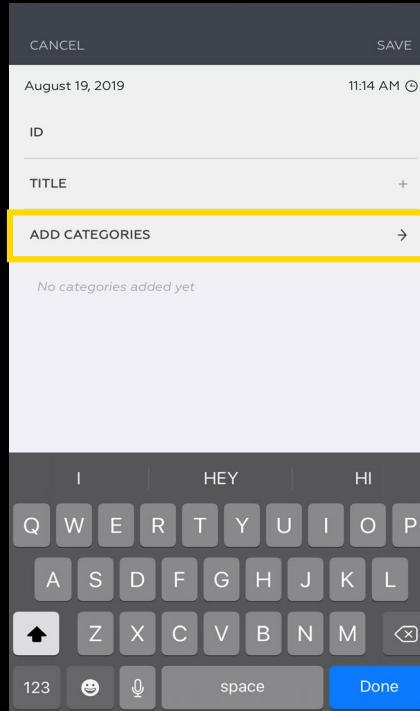


This screenshot shows the 'Add Categories' screen. At the top, there are 'CANCEL' and 'SAVE' buttons. Below that, the date 'August 19, 2019' and time '11:14 AM' are displayed. The 'ID' field contains '2019-123456'. The 'TITLE' field is empty. The 'ADD CATEGORIES' button is highlighted with a yellow box. Below it, a message says 'No categories added yet'. At the bottom is a virtual keyboard.

Step 5

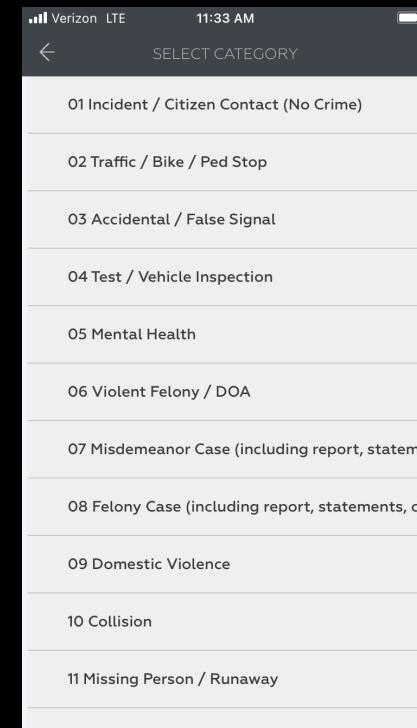

Step 6

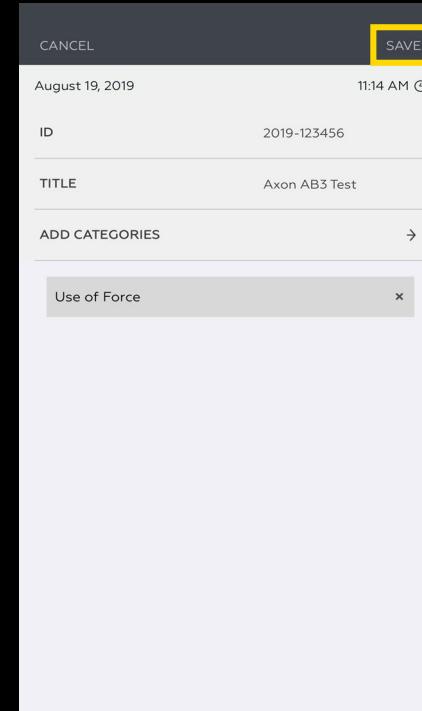

This screenshot shows the final annotated entry. The 'SAVE' button is highlighted with a yellow box. The 'ID' field is now '2019-123456'. The 'TITLE' field contains 'Axon AB3 Test'. The 'ADD CATEGORIES' button is present. A category box at the bottom lists 'Use of Force' with a close 'X' button. The bottom of the screen shows a blurred view of a city street.

ENTER CATEGORY LIST




CHOOSE A CATEGORY



TAP SAVE

1	Incident / Citizen Contact (No Crime)	933 false, civil, 945, medical
2	Traffic / Bike / Ped Stop	OMC, VC, PC (Infractions only)
3	Accidental / False Signal	
4	Test / Vehicle Inspection	
5	Mental Health	
6	Violent Felony / DOA	187, all DOAs, 245s, Mayhem, Kidnapping, Robbery, Carjacking, Arson, Explosive Device, Weapons of mass destruction, aggravated batteries with SBI/GBI
7	Misdemeanor Case (including report, statements, cite, or arrest)	Thefts, 602s, OMC and VC misdemeanors, 242s
8	Felony Case (including report, statements, cite, or arrest - no violent felonies or sex crimes)	10851, 459, grand thefts, VC and PC non-violent felonies, all wobblers
9	Domestic Violence	243(e)(1), 273.5, stalking,
10	Collision	
11	Missing Person / Runaway	
12	DUI	
13	Sex Crimes	261, 288, 289, 220, 243.4, 314, any other sex crime that can result in placement on 290 list
14	Vehicle Pursuit	
15	Sergeants / Commanders Admin	IBC, explaining things to community, etc.

# USING AXON VIEW - ANNOTATING

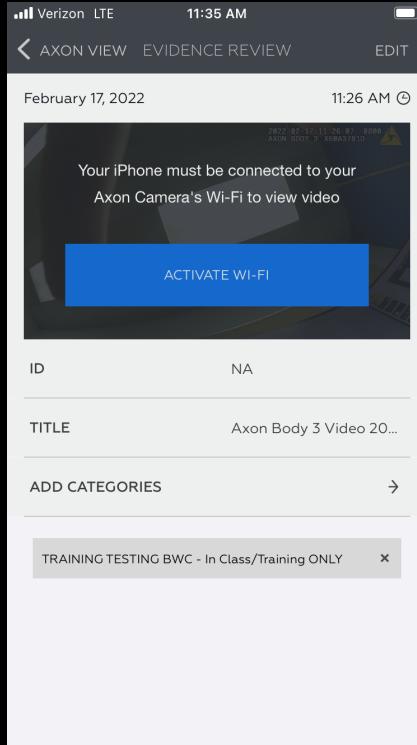

# ANNOTATION DONE!

# USING AXON VIEW - LIVE PREVIEW



Live Preview will allow you to stream via AB3's Wi-Fi Directly (iOS only)

# USING AXON VIEW - LIVE PREVIEW




Step 1




TAP VIEW LIVE

Step 2

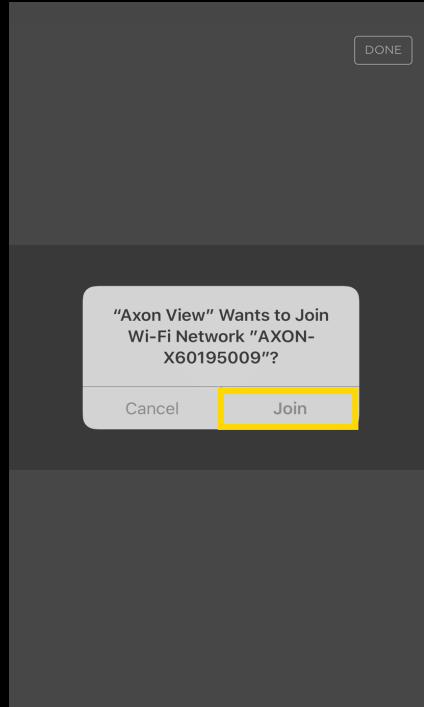

TAP JOIN


Step 3

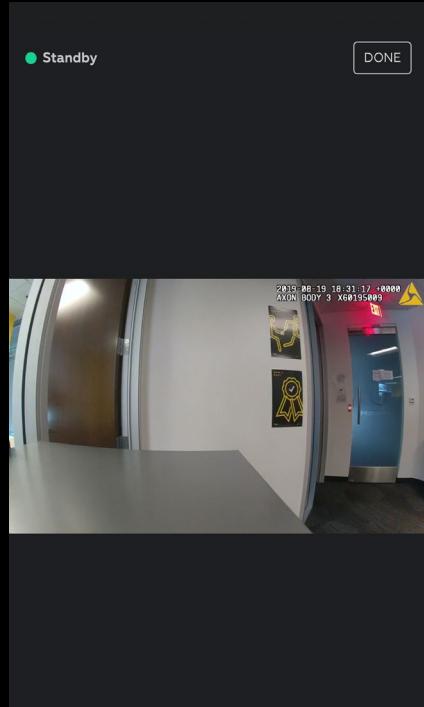

PREVIEW LIVE



# AXON VIEW – AB3 SETTINGS

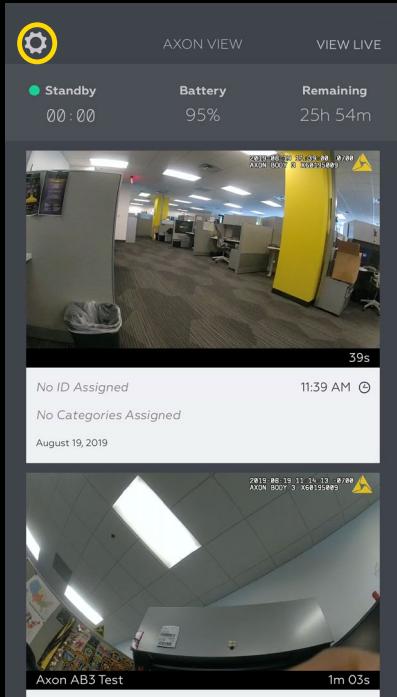

TAP ON



ADJUST SETTINGS


## CAMERA

- Volume: 0 – 5
- Vibration: Enabled/Disabled
- Stealth Mode: Enabled/Disabled

## LIGHTS

- Indicator Lights: Enabled/Disabled
- Top Brightness: Adjustable
- Front Brightness: Adjustable

# DOCKING

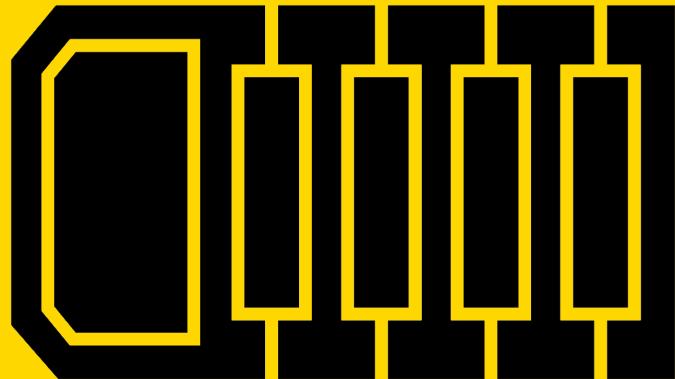

# DOCKING AND CHARGING





# TRIAD LED IN DOCK

Indicators during the upload process



Uploading Data  
**CYCLING YELLOW**



Upload Complete & <33% charge  
**SOLID RED**



Upload Complete & 33% - 97% charge  
**SOLID YELLOW**



# TRIAD LED IN DOCK

Indicators during the upload process



Upload Complete & >98% charged  
**SOLID GREEN**



Firmware Update  
**CYCLING WHITE**



Network Error  
**CYCLING RED, YELLOW, GREEN**

**Don't Undock  
If Cycling White!!**

# AB3 DISPLAY & TRIAD LED IN DOCK

Indicators during the upload process



Device Status	Camera Display		Triad LED
	Activity Area	Status Bar	
Uploading data	<b>UPLOADING 1/10</b>		Spinning yellow (cycling on each Triad LED)
Downloading data or applying device settings	<b>UPDATING</b>		Spinning yellow (cycling on each Triad LED)
Applying firmware update	<b>UPDATING</b>		Spinning white (cycling on each Triad LED)
Possible network error. Check network connection and refer to Troubleshooting section of the Axon Body 3 User Manual or go to <a href="http://help.axon.com">help.axon.com</a> .	<b>NETWORK ERROR</b>		Blinking red and green
Device error. Refer to device page in Axon Evidence.	<b>DEVICE ERROR</b>		Blinking red
Assigned user ID - shown when no other activity, other than charging, and for 10 secs after removing from dock	<b>USERID123</b>		Battery capacity
Battery capacity. The charge indicator (⚡) is shown to the right of battery capacity during charge	Any of the above		Solid green ( $\geq 98\%$ )
			Solid yellow (33% to 97%)
			Solid red (< 33%)



# CLEANING THE AB3

- Use a soft, damp cloth to clean the surface of the AB3. Do not use harsh cleaners or solvents. You may moisten the cloth with isopropyl alcohol
- Do not immerse the AB3 in water or cleaning solutions
- If the AB3 camera lens becomes dirty, use a lens blower brush to clean it and then wipe it with a soft cloth if necessary
- If the AB3 camera display becomes dirty, clean the display with soapy water and then dry with a soft cloth
- Do not use ammonia-based or similar type window cleaners on the camera lens or camera display
- Do not place the lens under running water or apply jets of water
- Ensure the AB3 microphone openings are clean and clear of any debris


# AXON CAPTURE



# AXON CAPTURE




- Captures digital evidence directly from the field
- Eliminates the need to use alternative devices for photo, video, and audio recording
- Ability to add metadata and GPS coordinates to any evidence uploaded
- Ability to utilize Axon Citizen

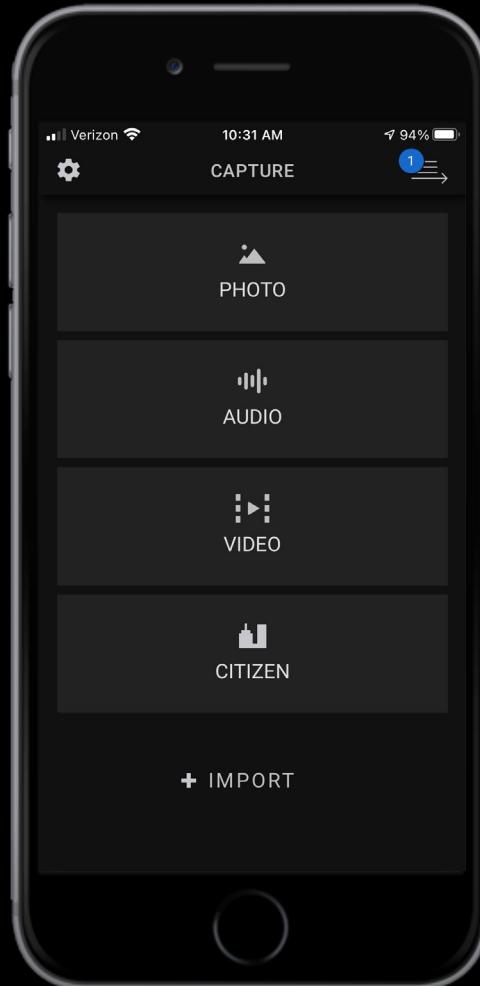

# AXON CAPTURE




## Step 1

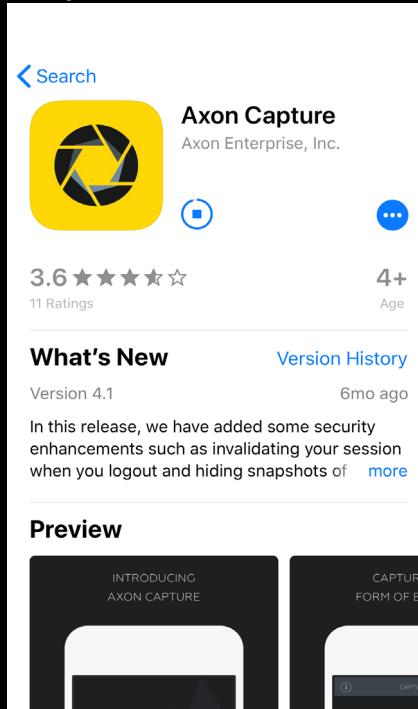


DOWNLOAD THE APP

## Step 2

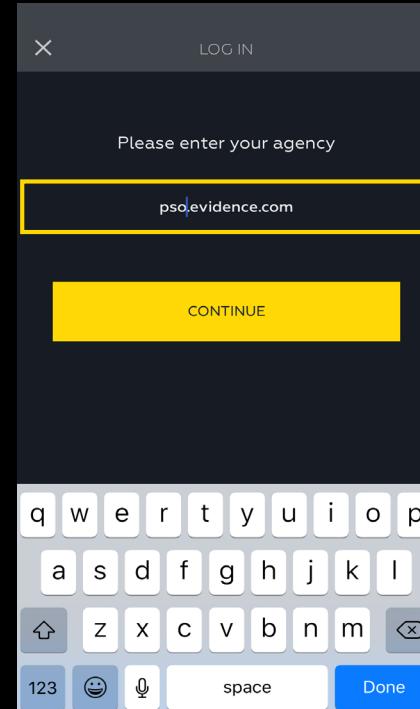

ENTER YOUR AGENCY

## Step 3

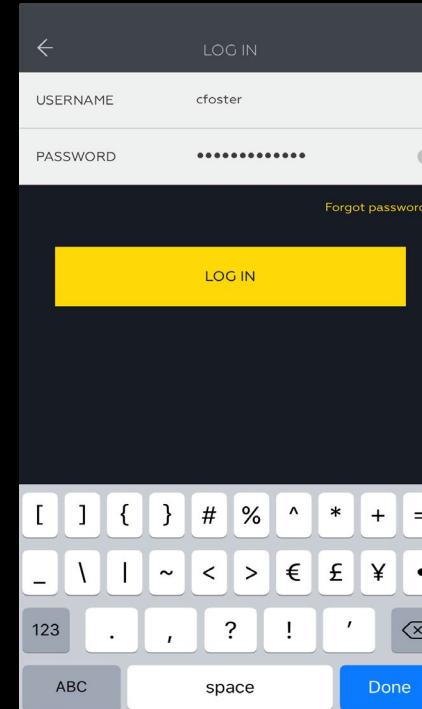


LOG IN USING AXON EVIDENCE CREDENTIALS

# AXON CAPTURE




Step 4

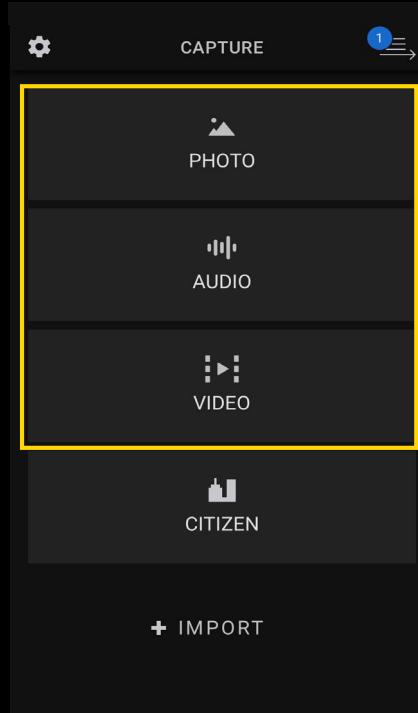

Step 5



Step 6

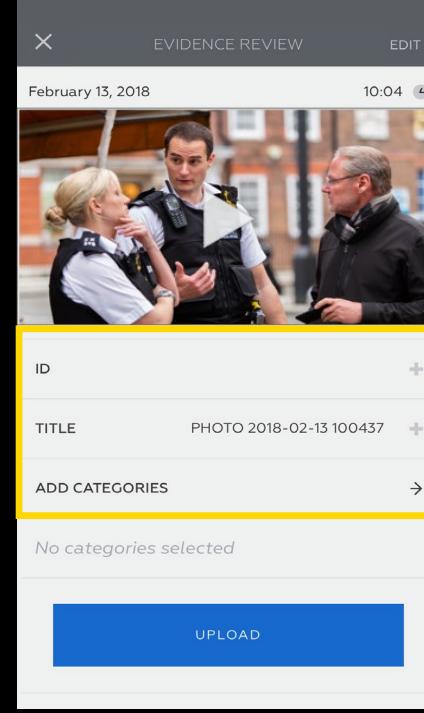

TAP ON CAPTURE METHOD




CAPTURE EVIDENCE



ADD METADATA & REVIEW

# AXON CAPTURE


EVIDENCE WILL UPLOAD  
DIRECTLY INTO YOUR AXON  
EVIDENCE ACCOUNT

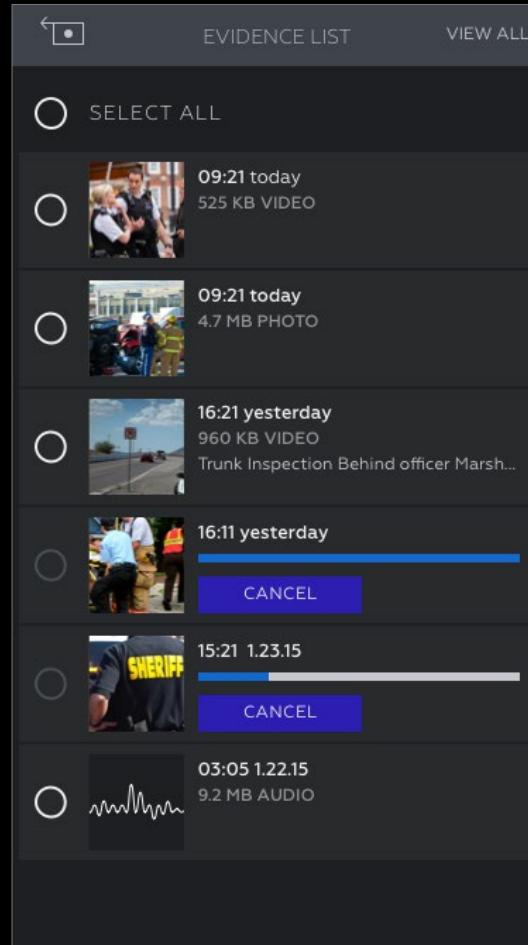


# AXON CAPTURE - BULK EDIT




Step 4a

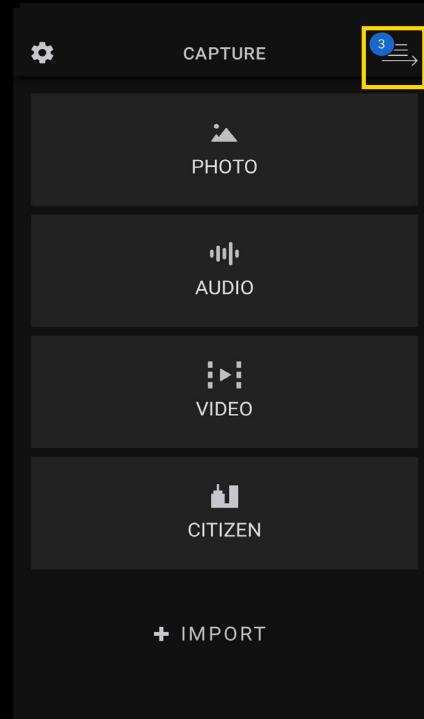

Step 5a

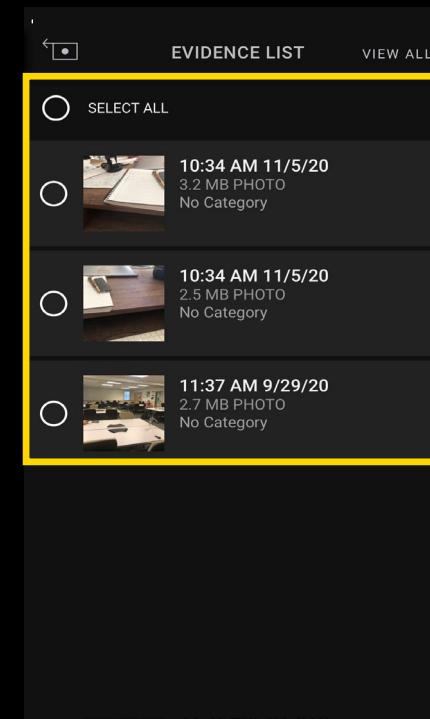

Step 6a

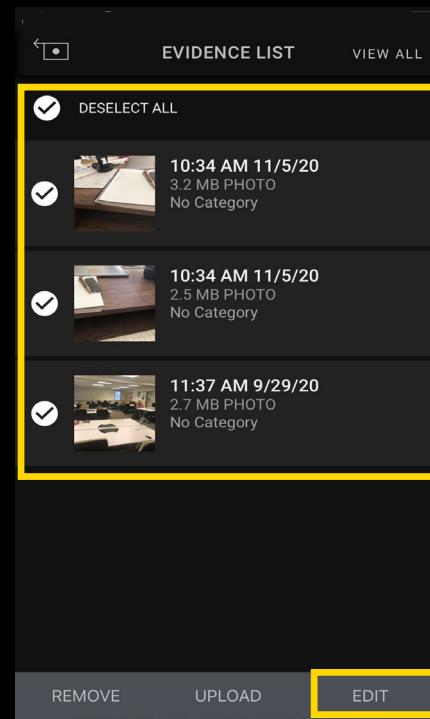

TAP ON EVIDENCE LIST

SELECT EVIDENCE

ADD METADATA

# AXON CAPTURE - BULK EDIT



Step 7a

CANCEL BULK EDIT SAVE

Changes will be made to the 3 files selected.

ID

ADD CATEGORIES +

Step 8a

CHOOSE CATEGORY

1 DD Category

7-DD Category

Administrative Investigation

✓ Arrest -Misdemeanor

Critical Incident/OIS

Domestic Violence

DUI

Felony Narcotics

Field Contact

Homicide

Interview Room

Open Records Request

TAP TO ADD METADATA



SELECT CATEGORY



Step 9a

CANCEL BULK EDIT SAVE

Changes will be made to the 3 files selected.

ID 2020-12082020

ADD CATEGORIES +


Arrest -Misdemeanor X

TAP SAVE

# AXON CAPTURE - BULK EDIT




Step 10a

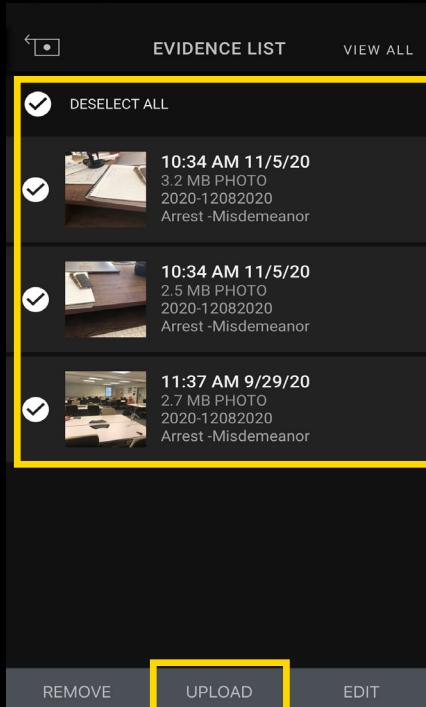

SELECT EVIDENCE & UPLOAD

Step 11a

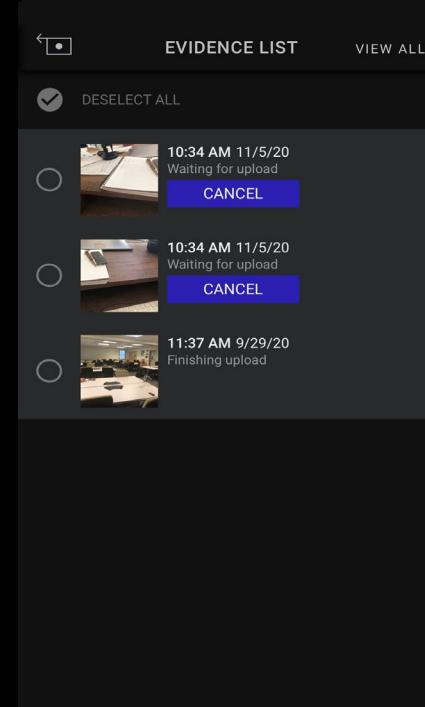

EVIDENCE WILL UPLOAD

# NOTING CAPTURE EVIDENCE IN 950S

## In Evidence Section (example):

- 1) Three (3) photos of the victim's injuries. I took with my work cell phone and uploaded to evidence.com via Capture.

## What's important?

- What is this evidence? (description, number, titling evidence in evidence.com and/or differentiating it in your 950)
- Who collected it and how? (I took a photo, I took a video, I used my work phone, etc).
- Chain of custody (I uploaded it to evidence.com via capture). Once it is in evidence.com the cloud and audits handle chain of custody.


# AXON CITIZEN






# AXON CITIZEN

Step 1

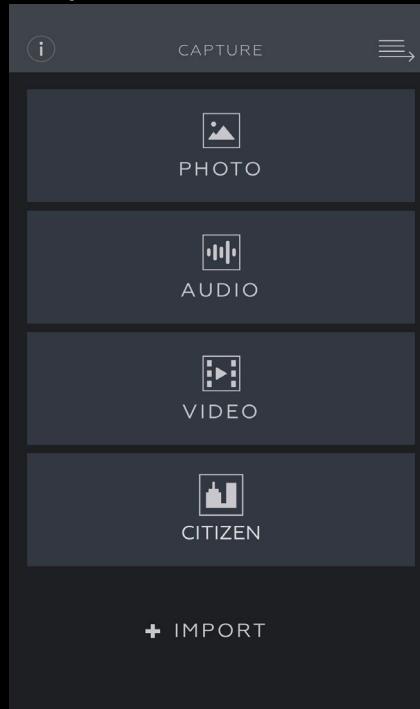

Step 2

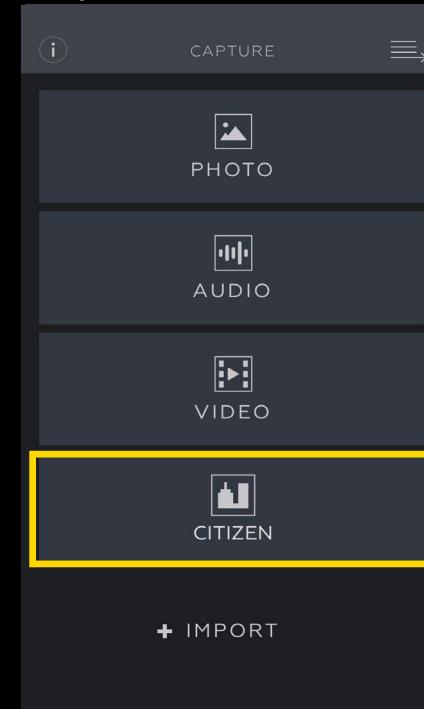

Step 3a

INDIVIDUAL INVITE

INCIDENT

ID\*

ADD CATEGORIES\*

DESCRIPTION

INVITE

PHONE

EMAIL

+1 (000)000-0000

COMMUNITY MEMBER

FIRST NAME\*

MIDDLE NAME

ENTER AXON CAPTURE APP

TAP CITIZEN

FILL OUT REQUIRED INFORMATION

# AXON CITIZEN



## Step 3b

X INDIVIDUAL INVITE CLEAR

INCIDENT

ID\*

ADD CATEGORIES\* +

DESCRIPTION

INVITE

PHONE EMAIL

+1 (000)000-0000

COMMUNITY MEMBER

FIRST NAME\*

MIDDLE NAME

## Step 3c

X INDIVIDUAL INVITE CLEAR

INCIDENT

ID\*

ADD CATEGORIES\* +

DESCRIPTION

INVITE

PHONE EMAIL

EMAIL

COMMUNITY MEMBER

FIRST NAME\*

MIDDLE NAME

## Step 3d

X INDIVIDUAL INVITE CLEAR

INVITE

PHONE EMAIL

EMAIL

COMMUNITY MEMBER

FIRST NAME\*

MIDDLE NAME

LAST NAME\*

DATE OF BIRTH YYYY-MM-DD

SEND

SELECT PHONE OR EMAIL



ENTER PHONE# OR EMAIL



FILL OUT REQUIRED INFORMATION

# AXON CITIZEN



## Step 4

INDIVIDUAL INVITE

X CLEAR

INVITE

PHONE EMAIL

EMAIL

COMMUNITY MEMBER

FIRST NAME\*

MIDDLE NAME

LAST NAME\*

DATE OF BIRTH YYYY-MM-DD

SEND

TAP SEND

## Step 5


The invite has been sent

OK

CREATE ANOTHER INVITE

TAP OK OR ANOTHER INVITE

## Step 6

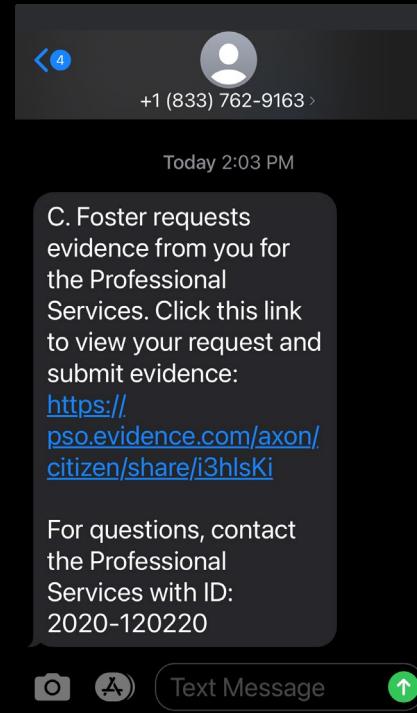


CITIZEN RECEIVES A LINK




# AXON CITIZEN


## Step 7

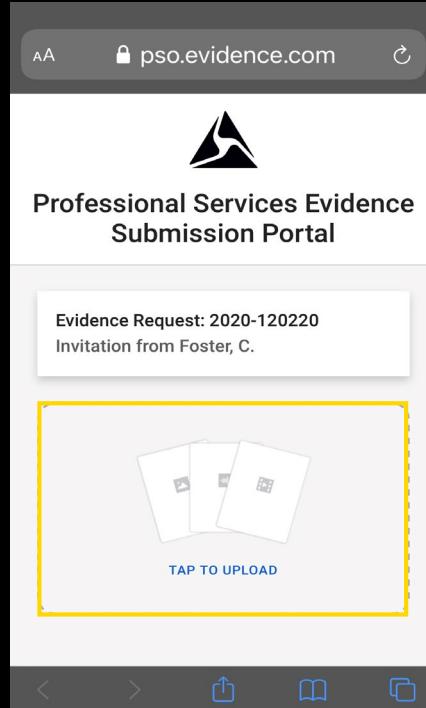

## Step 8

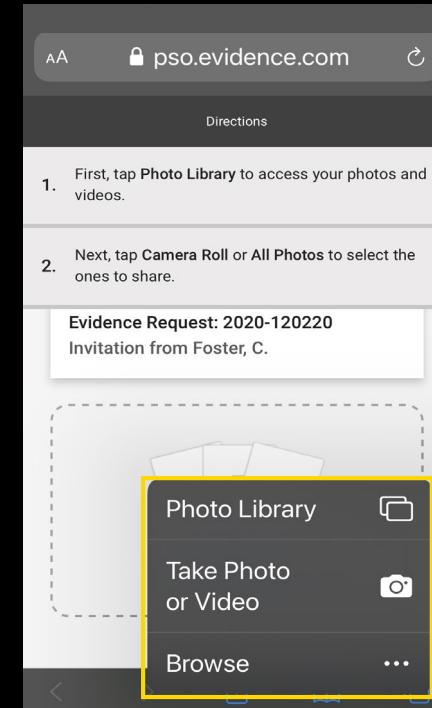

## Step 9

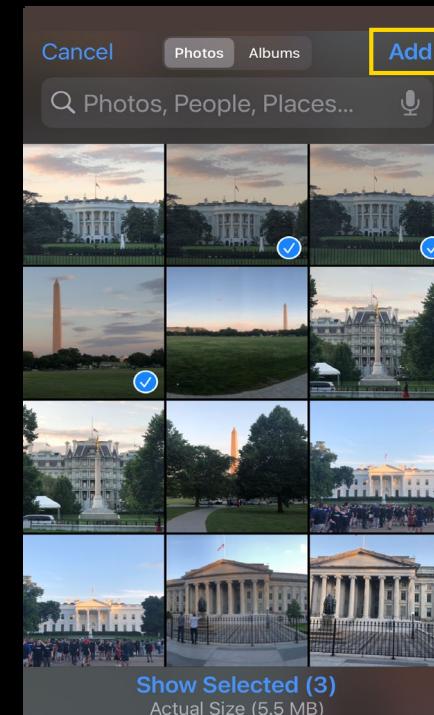

CITIZEN TAPS UPLOAD



CITIZEN ENTERS LIBRARY



CITIZEN SELECTS/ADDS EVIDENCE

# AXON CITIZEN



## Step 10

pso.evidence.com

Add an optional caption



970B6F73-5B35-4C02-A8BE-955 38FF855BD.jpeg

Add an optional caption



ADD MORE

By selecting 'Submit', I agree that these files are relevant to the incident.

SUBMIT

PRIVACY POLICY TERMS OF USE

## Step 11

pso.evidence.com

Professional Services Evidence Submission Portal

Evidence Request: 2020-120220  
Invitation from Foster, C.



2E09EFF2-EA27-4D89-A72F-A7E 516987822.jpeg

Add an optional caption



BD03B663-2A44-4546-A9A8-A9

By selecting 'Submit', I agree that these files are relevant to the incident.

SUBMIT

< >   

IF NEEDED ADD MORE EVIDENCE

CITIZEN SUBMITS

## Step 12

pso.evidence.com

Professional Services Evidence Submission Portal

Thank you  
Your files have been submitted

PRIVACY POLICY TERMS OF USE

CONFIRMATION



**EVIDENCE WILL UPLOAD  
DIRECTLY INTO AXON  
EVIDENCE ACCOUNT TO BE  
VIEWED BY AUTHORIZED USER**

# NOTING CITIZEN EVIDENCE IN 950

Link sent, evidence not in yet:

Write in 950 body:

- I sent W1 DOE a citizen link under RD# YY-XXXXXX requesting XXXX (photos of the injuries, the photo W1 said he/she had of the suspect vehicle, etc.).

Link sent, evidence received, not sure what it is:

List in evidence section:

- 1) Unknown digital evidence sent by DOE to OPD's evidence.com digital evidence site via citizen link I sent to DOE.

Link sent, evidence received, you know what it is:

List in evidence section:

- 1) Five (5) photos of DOE's injuries, sent by DOE to OPD's evidence.com digital evidence site via citizen link I sent to DOE.



**LET'S MOVE TO A  
COMPUTER AT THE  
REPORT WRITING  
ROOM**

Come back to  
slide 74

# AXON VIEW XL



Exercise: Plug in your camera to your computer using your cord, then open up View XL.



# AXON VIEW XL

Step 1

AGENCY LOOKUP

Please enter your agency's evidence.com URL.

**CONTINUE**

Step 2

Professional Services  
pso.evidence.com [Change agency](#)

USERNAME  
**cfoster**

PASSWORD  
.....

**SIGN IN**

[Forgot Password?](#)


ENTER VIEW XL AND ENTER YOUR AGENCY



ENTER AXON EVIDENCE USERNAME  
AND PASSWORD


# AXON VIEW XL

Step 3

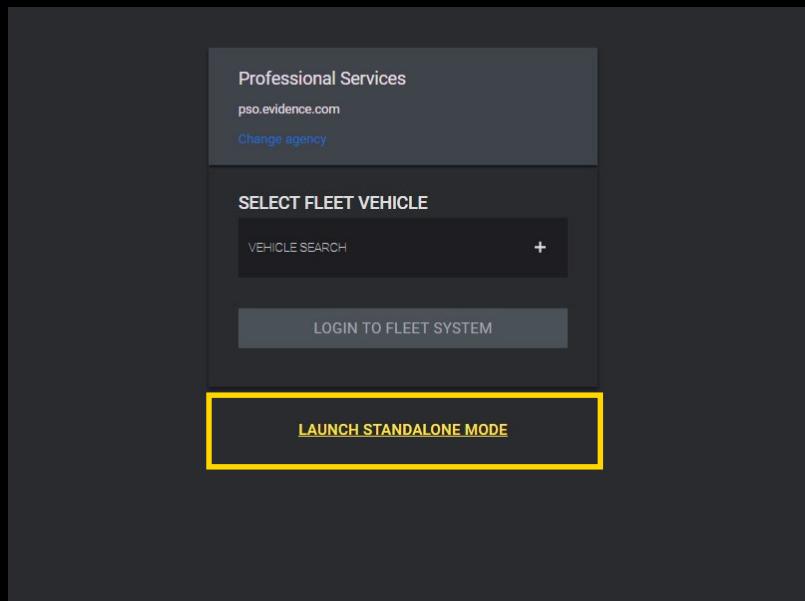

LAUNCH STANDALONE MODE

Step 4

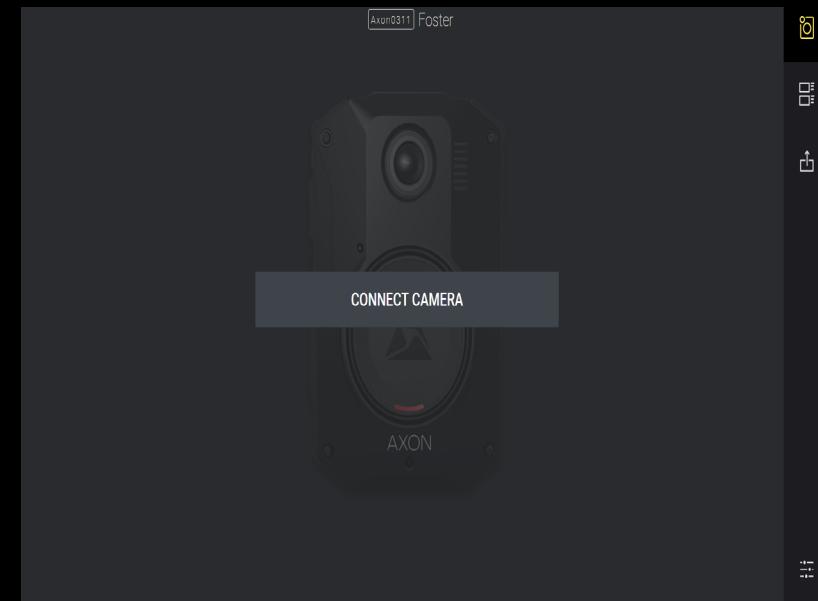

CONNECT CAMERA

# USING AXON VIEW XL - CAMERA ASSIGNMENT



Step 5




CLICK ON REASSIGN OR UNASSIGN



# USING AXON VIEW XL - METADATA

## Step 6

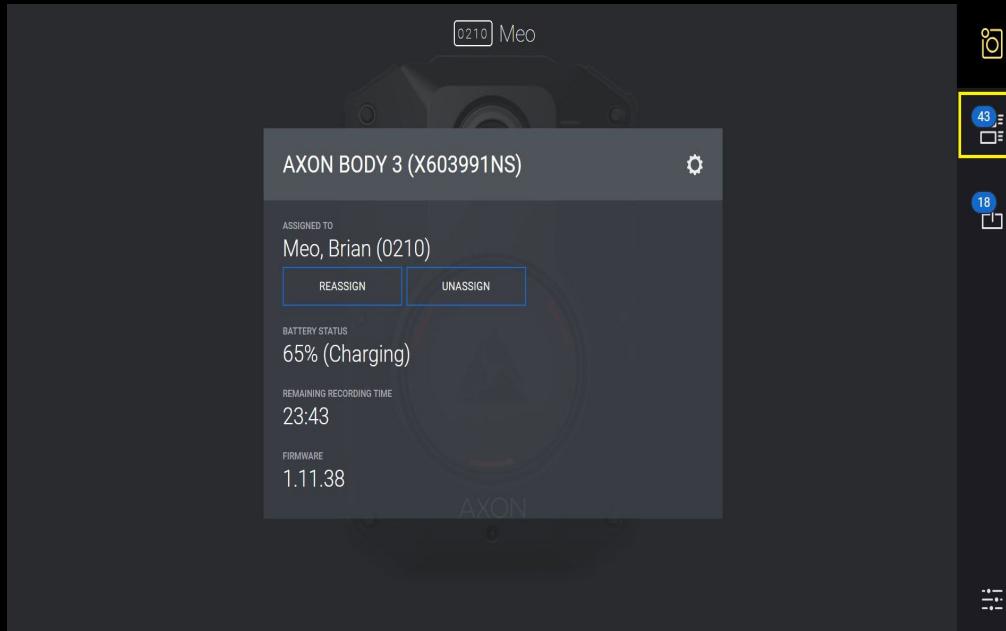


CLICK ON REVIEW TAB



# USING AXON VIEW XL - METADATA

## Step 7

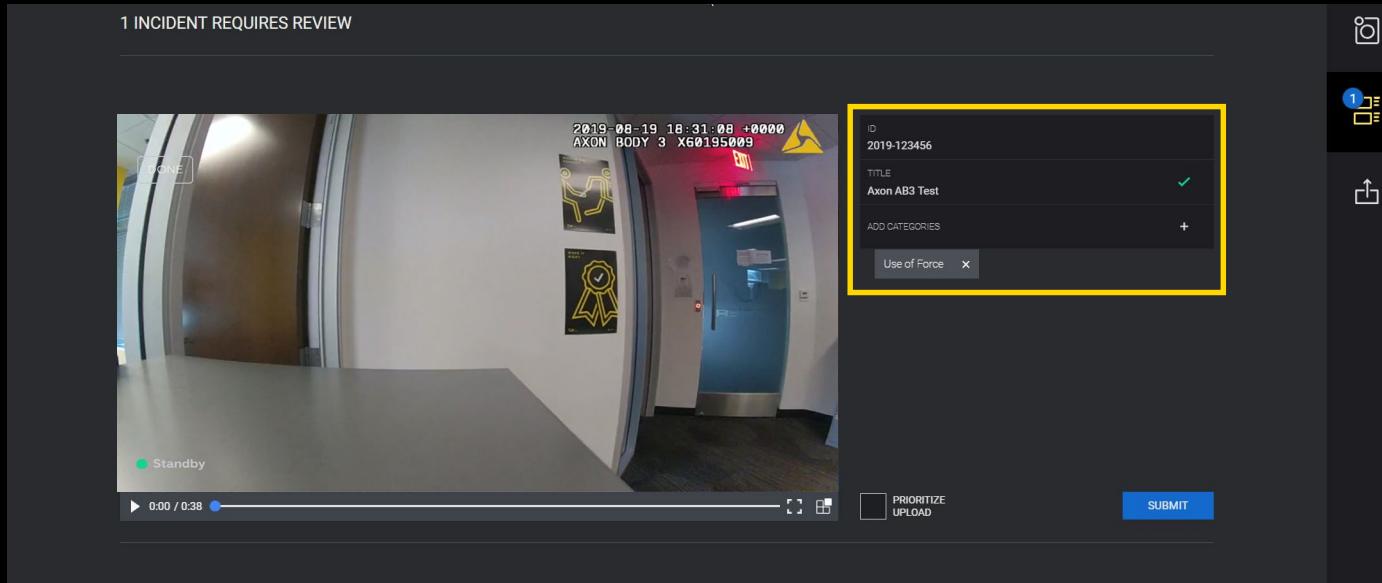


ADD ID, TITLE, AND CATEGORY



# USING AXON VIEW XL - METADATA


## Step 8

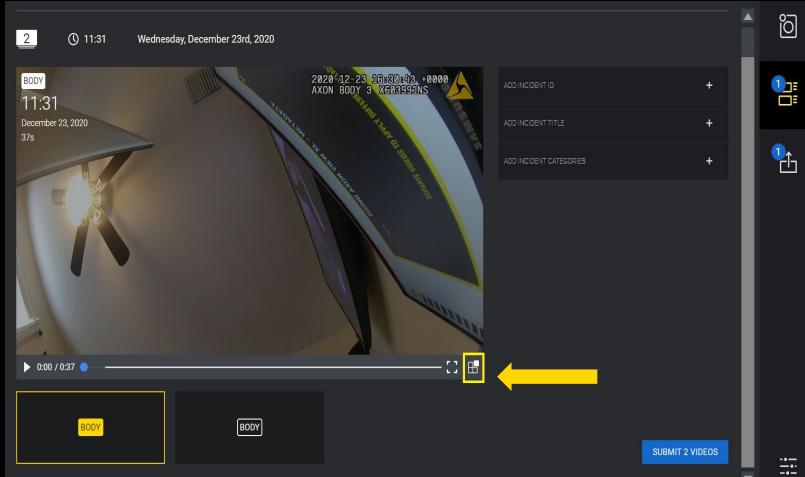

CLICK REMOVE FROM INCIDENT ICON

SEPARATE VIDEOS TO APPLY DIFFERENT METADATA

## Step 9

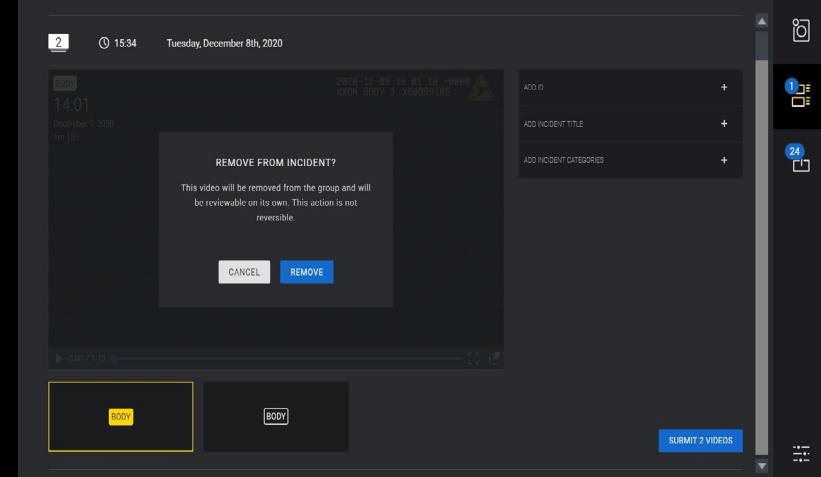


CLICK REMOVE TO SEPARATE VIDEOS



# USING AXON VIEW XL - UPLOAD

## Step 10

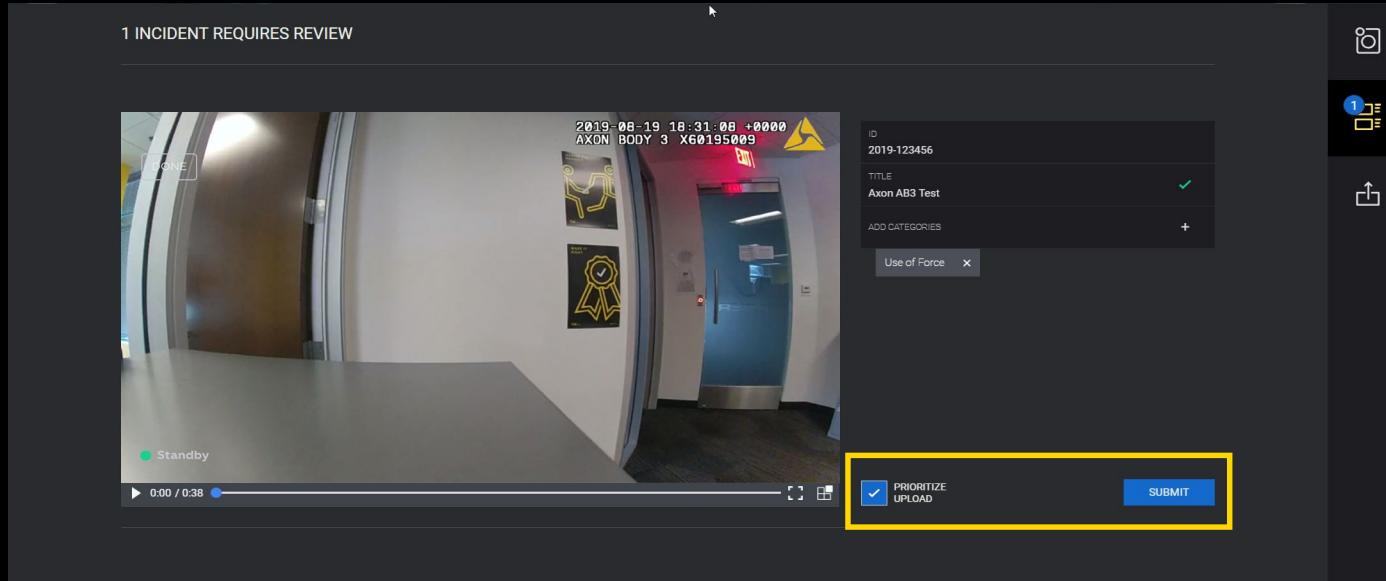

SELECT PRIORITY UPLOAD AND CLICK SUBMIT



# USING AXON VIEW XL - UPLOAD

## Step 10a


The screenshot shows the Axon View XL interface with the 'UPLOAD STATUS' tab selected. The top bar displays '1 VIDEOS QUEUED' and '0 VIDEOS UPLOADING'. Below this, a video preview for a 'BODY' recording from '10:38' on 'September 16, 2019' (38s) is shown. The video preview has a yellow border around the text '1 VIDEOS QUEUED'. To the right of the preview, the video details are listed: 'TITLE: Axon AB3 Test', 'ID: 2019-123456', 'PRIORITY: PRIORITY', and 'Use of Force'. Below the video details, a progress bar shows 'Upload pending' with '0 MB / 19 MB'. On the far right, a vertical toolbar includes icons for 'UPLOAD' (with a blue circle containing '1' and a yellow border), 'SEARCH', and 'FILTER'.

THE UPLOAD TAB WILL SHOW AB3 VIDEO EVIDENCE QUEUED FOR AND UPLOADING TO AXON EVIDENCE



# USING AXON VIEW XL - UPLOAD

## Step 10b

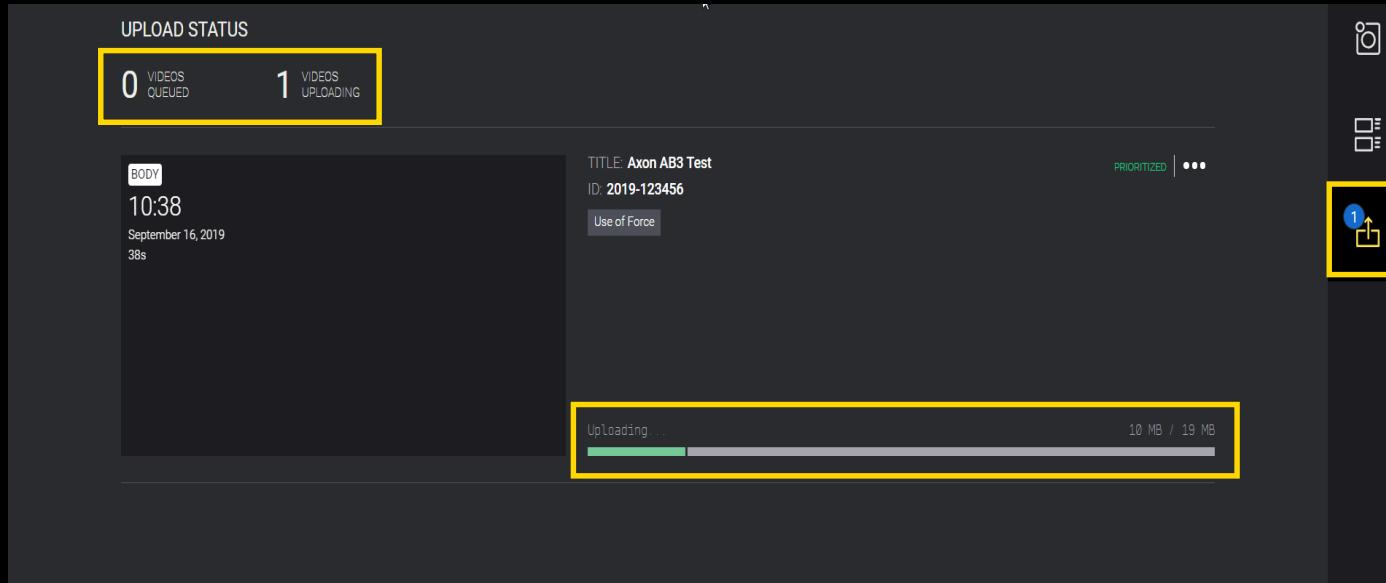

THE UPLOAD TAB WILL SHOW AB3 VIDEO EVIDENCE QUEUED FOR AND UPLOADING TO AXON EVIDENCE




# AXON VIEW XL - SETTINGS

## Step 1



CLICK SETTINGS ICON

## Step 2

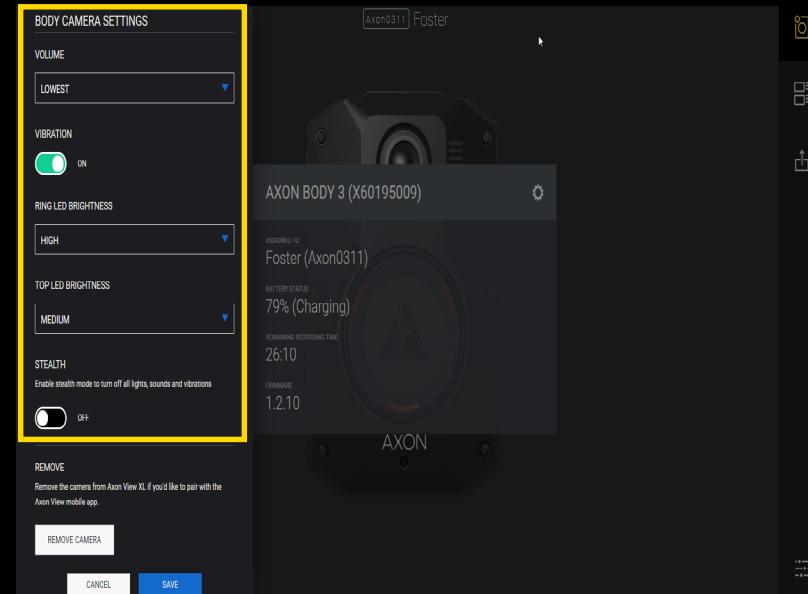

CHANGE AB3 SETTINGS

# **“RESTRICTED” AND “CONFIDENTIAL” EVIDENCE**

- If something is listed as “restricted” it means distribution is limited. This is done automatically for certain things like:
  - Sex crimes
  - Level 1 or 2 UOFs
  - Certain major or high profile crimes
- If something is listed as “confidential” it is part of an IAD investigation.
- If there is a legitimate need for you to see a piece of restricted or confidential evidence, please contact the Unit / Division that owns the evidence (e.g., SVU, IAD, etc.)

**EVIDENCE.COM**

**REMEMBER:  
EVERYTHING IS  
AUDITED!**

### Annotating in Evidence.com

- K32s – Custom metadata field, right side
- Markers – you can mark spots for yourself / sergeant / investigators
- “Description” box – talk about the incident
- “Notes” box – things about the video (watched it to recall incident, for training, reviewed for UOF, etc.)

### Sergeants / Command – Stay behind to see more stuff

- Search options
- Review mode
- Respond
- Other categories



# WHAT WE COVERED

[AXON BODY 3 \(AB3\) OVERVIEW](#)

[OPERATING FUNCTIONS](#)

[MOUNTING](#)

[AXON VIEW & PAIRING](#)

[AXON DOCK](#)


[AXON VIEW XL](#)

[AXON CAPTURE AND CITIZEN](#)



# FREQUENTLY ASKED QUESTIONS

- Does turning on my camera turn on other people's camera? NO
- Will the signal units on holsters (when they come) turn on everyone's cameras, or just mine? JUST YOURS
- Where is the K32 marker? Currently (circa Feb 22), it is in Custom Metadata on evidence.com:

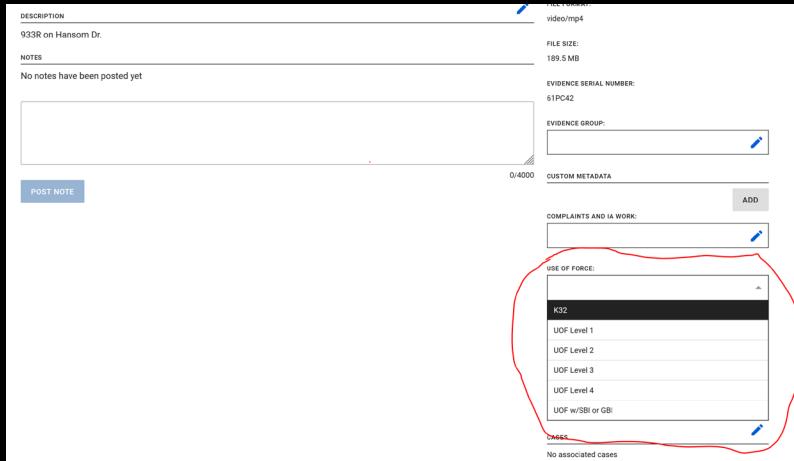

DESCRIPTION  
933R on Hansom Dr.

FILE FORMAT:  
video/mp4

FILE SIZE:  
189.5 MB

EVIDENCE SERIAL NUMBER:  
61PC42

EVIDENCE GROUP:  
[empty]

NOTES  
No notes have been posted yet

0/4000

POST NOTE

CUSTOM METADATA

ADD

COMPLAINTS AND IA WORK:  
[empty]

USE OF FORCE:  
K32  
UOF Level 1  
UOF Level 2  
UOF Level 3  
UOF Level 4  
UOF w/SB or GB

CASES  
No associated cases

Q&A